
















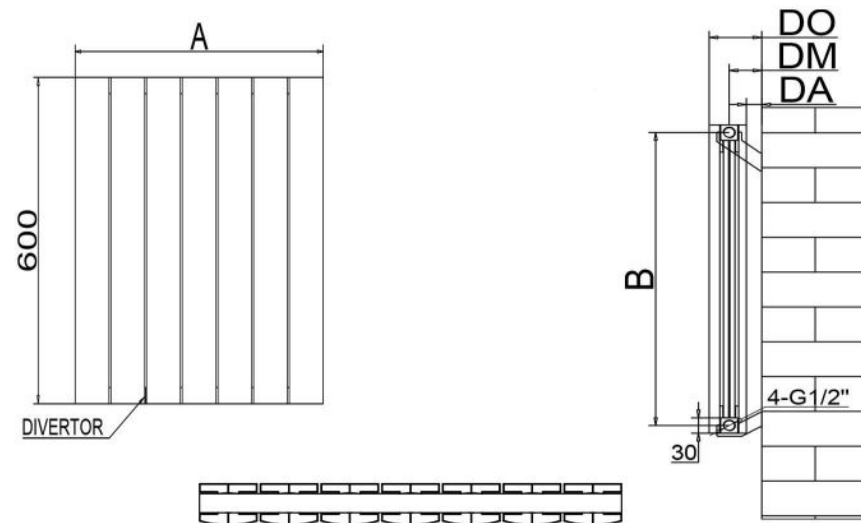


LOCO INSTALLATION GUIDE



This product must be fitted only by a fully qualified installer.

Description	Illustration	Qty
Radiator		1
Top Bracket		2
Bottom Bracket		2
Fixing Screw		4
Spacer		4
Air Vent		2
Vent cover		2

Description	Illustration
Fixings choose the appropriate fixing for the wall material if required	
PTFE tape	
Electric drill	
Masonry drill bit appropriate to the fixings	
Adjustable spanner	
Radiator valve Hex Key	
Flat head and Philips head screw drivers	
1 Lock shield valve and 1 Gate or Thermostatic valve	
Spirit level	
Measuring tape	



This picture represents appearance look of a radiator.

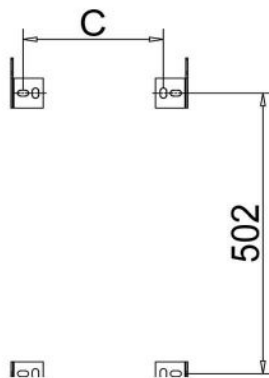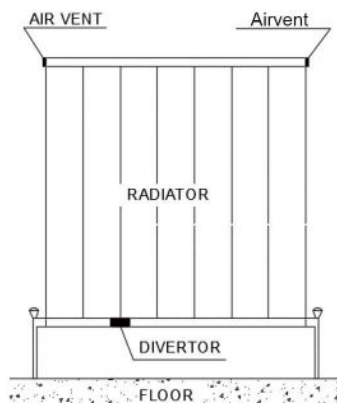

NAMES		A	B	C	TUBE QTY	DA	DM	DO
A-CSL060047AD	600	470	570	247.5	5	22	57	87
A-CSL060047WD	600	470	570	247.5	5	22	57	87
A-CSL060066AD	600	660	570	437.5	7	22	57	87
A-CSL060066WD	600	660	570	437.5	7	22	57	87
A-CSL060085AD	600	850	570	627.5	9	22	57	87
A-CSL060085WD	600	850	570	627.5	9	22	57	87
A-CSL060104AD	600	1040	570	817.5	11	22	57	87
A-CSL060104WD	600	1040	570	817.5	11	22	57	87
A-CSL060123AD	600	1230	570	817.5	13	22	57	87
A-CSL060123WD	600	1230	570	817.5	13	22	57	87
A-CSL060142AD	600	1420	570	817.5	15	22	57	87
A-CSL060142WD	600	1420	570	817.5	15	22	57	87

GENERAL RECOMMENDATION

- Before fitting the radiator it is necessary to wash out the heating system to remove any existing mud, scale, work residues, traces of flux, oil, etc.
- When the system water pH is outside the 8,5-5,5 range and/or when the dissolved is above 0,1mg/liter, it is always needed to protect the heating system components (the radiator is one of these) with a proper chemical treatment compatible with all parts in contact with water (silicon rubber too).
- In order to fit the radiator to the wall, it is necessary to choose the proper fixings for the wall material.
- If the system water exceeds °50C, please install a warning mark near the radiator to avoid any accidental scalding.
- Clean the radiator surface only with a soft cloth to avoid scratching the finish and do not use chemical againts during cleaning operations. It is prohibited to climb onthe radiator.
- Maximum working temperature °95C, maximum working pressure 4 bar.